

Schedule

PERIODIC MAINTENANCE SERVICES

2. Schedule

A: MAINTENANCE SCHEDULE 1

1. U.S.

	Months	Maintenance interval [Number of months or km (miles), whichever occurs first]																	Remarks	
		3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
		× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180		192
	× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
1	Engine oil	Replace every 3.75 months or every 6,000 km (3,750 miles).																		
2	Engine oil filter	Replace every 3.75 months or every 6,000 km (3,750 miles).																		
3	Spark plug									R									R	
4	Drive belt(s)					I				I				I		R				
5	Camshaft drive belt					I				I				I		R				
6	Fuel line					(I)				(I)				(I)					I	Note (1)
7	Fuel filter									R									R	
8	Air cleaner element					R				R					R				R	Note (2)
9	Cooling system					I				I				I					I	
10	Engine coolant																			Note (5)
11	Clutch system			I		I		I		I		I		I		I		I		
12	Transmission oil					I				I				I					I	
13	Front and rear differential oil					I				I				I					I	
14	Brake line			I		I		I		I		I		I		I		I		
15	Brake fluid					R				R				R					R	
16	Disc brake pad and disc			I		I		I		I		I		I		I		I		
17	Parking brake			I		I		I		I		I		I		I		I		
18	Suspension			I		I		I		I		I		I		I		I		
19	Wheel bearing									(I)									(I)	
20	Axle boots and joints			I		I		I		I		I		I		I		I		
21	Tire rotation		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Note (3)
22	Steering system (power steering)			I		I		I		I		I		I		I		I		
23	A/C filter	Check every 12 months or every 12,000 km (7,500 miles).																	Note (4)	

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.

2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.

3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.

4. When the A/C filter is installed.

5. Replace the first time after 11 years or every 220,000 km (137,500 miles), and thereafter every six years or every 120,000 km (75,000 miles).

Schedule

PERIODIC MAINTENANCE SERVICES

2. CANADA

		Maintenance interval [Number of months or km (miles), whichever occurs first]																	Remarks
Months	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
× 1,000 km	4.8	12	24	36	48	60	72	81.4	96	108	120	132	144	156	168	180	192		
× 1,000 miles	3	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120		
1	Engine oil	Replace every 3.75 months or every 6,000 km (3,750 miles).																	
2	Engine oil filter	Replace every 3.75 months or every 6,000 km (3,750 miles).																	
3	Spark plug									R								R	
4	Drive belt(s)					I				I							R		
5	Camshaft drive belt						I			I						R			
6	Fuel line					(I)				(I)				(I)				I	
7	Fuel filter									R								R	
8	Air cleaner element						R			R					R			R	
9	Cooling system						I			I								I	
10	Engine coolant																		
																		Note (5)	
11	Clutch system			I		I			I		I		I		I		I		
12	Transmission oil						I			I					I			I	
13	Front and rear differential oil						I			I					I			I	
14	Brake line			I		I		I		I		I		I		I		I	
15	Brake fluid						R			R					R			R	
16	Disc brake pad and disc			I		I		I		I		I		I		I		I	
17	Parking brake			I		I		I		I		I		I		I		I	
18	Suspension			I		I		I		I		I		I		I		I	
19	Wheel bearing									(I)								(I)	
20	Axle boots and joints			I		I		I		I		I		I		I		I	
21	Tire rotation		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
																		Note (3)	
22	Steering system (power steering)			I		I		I		I		I		I		I		I	
23	A/C filter	Check every 12 months or every 12,000 km (7,500 miles).																	Note (4)

Symbols used:

R: Replace

I: Inspection

(R) or (I): Recommended service for safe vehicle operation.

NOTE:

1. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
2. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
3. A tire should be replaced when the tread wear indicator appears as a solid band across the tread. The indicators appear when the remaining tread has been worn to 1.6 mm (0.063 in) or less.
4. When the A/C filter is installed.
5. Replace the first time after 11 years or every 220,000 km (137,500 miles), and thereafter every six years or every 120,000 km (75,000 miles).

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance drive	Repeat rough/muddy road drive	Extremely cold weather area	Salt or other corrosive used or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Engine oil filter	3.75 months	R		R			R
	6,000 km						
	3,750 miles						
Fuel line	7.5 months				I		
	12,000 km						
	7,500 miles						
Transmission oil	15 months						R
	24,000 km						
	15,000 miles						
Front and rear differential oil	15 months						R
	24,000 km						
	15,000 miles						
Brake line	7.5 months				I		
	12,000 km						
	7,500 miles						
Brake fluid	15 months					R	
	24,000 km						
	15,000 miles						
Disc brake pad and disc	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Parking brake	7.5 months				I		
	12,000 km						
	7,500 miles						
Suspension	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						
Axle Boots & Joints	7.5 months	I	I		I		I
	12,000 km						
	7,500 miles						
Steering system (Power steering)	7.5 months		I	I	I		
	12,000 km						
	7,500 miles						