

# Schedule

## PERIODIC MAINTENANCE SERVICES

### 2. Schedule

#### A: MAINTENANCE SCHEDULE

##### 1. FOR U.S. MODEL

|               |                                    | Maintenance interval<br>[Number of months or km (miles), whichever occurs first]  |    |      |    |      |    |      |     |      |     |      |     |      |     |       |     |     |                 | Remarks  |
|---------------|------------------------------------|---|----|------|----|------|----|------|-----|------|-----|------|-----|------|-----|-------|-----|-----|-----------------|----------|
| Months        | 3                                  | 7.5   | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60  | 67.5 | 75  | 82.5 | 90  | 97.5 | 105 | 112.5 | 120 | 132 |                 |          |
| × 1,000 km    | 4.8                                | 12  | 24 | 36   | 48 | 60   | 72 | 84   | 96  | 108  | 120 | 132  | 144 | 156  | 168 | 180   | 192 | 220 |                 |          |
| × 1,000 miles | 3                                  | 7.5   | 15 | 22.5 | 30 | 37.5 | 45 | 52.5 | 60  | 67.5 | 75  | 82.5 | 90  | 97.5 | 105 | 112.5 | 120 | 132 |                 |          |
| 1             | Engine oil                         | (R)   | R  | R    | R  | R    | R  | R    | R   | R    | R   | R    | R   | R    | R   | R     | R   | R   | R               |          |
| 2             | Engine oil filter                  | (R)   | R  | R    | R  | R    | R  | R    | R   | R    | R   | R    | R   | R    | R   | R     | R   | R   | R               |          |
| 3             | Spark plug                         |   |    |      |    |      |    |      | R   |      |     |      |     |      |     |       |     | R   |                 |          |
| 4             | Drive belt(s)                      |   |    |      |    | I    |    |      | I   |      |     |      |     | I    |     |       |     | I   | Non-turbo Model |          |
|               |                                    |   |    |      |    | I    |    |      | I   |      |     |      |     | I    |     | R     |     | I   | Turbo Model     |          |
| 5             | Timing belt                        |   |    |      |    | I    |    |      | I   |      |     |      |     | I    |     | R     |     |     |                 |          |
| 6             | Fuel line                          |   |    |      |    | (I)  |    |      | (I) |      |     |      |     | (I)  |     |       |     | I   | Note (1)        |          |
| 7             | Fuel filter                        |   |    |      |    |      |    |      | R   |      |     |      |     |      |     |       |     | R   | Note (1)        |          |
| 8             | Air cleaner element                |   |    |      |    | R    |    |      | R   |      |     |      |     | R    |     |       |     | R   | Note (2)        |          |
| 9             | Cooling system                     |   |    |      |    | I    |    |      | I   |      |     |      |     | I    |     |       |     | I   |                 |          |
| 10            | Engine coolant                     | Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter |    |      |    |      |    |      |     |      |     |      |     |      |     |       |     |     |                 |          |
| 11            | Clutch system                      |   |    | I    |    | I    |    | I    |     | I    |     | I    |     | I    |     | I     |     | I   |                 |          |
| 12            | Transmission gear oil              |   |    |      |    | I    |    |      | I   |      |     |      |     | I    |     |       |     | I   |                 |          |
| 13            | ATF                                |   |    |      |    | I    |    |      | I   |      |     |      |     | I    |     |       |     | I   |                 |          |
| 14            | Front & rear differential gear oil |   |    |      |    | I    |    |      | I   |      |     |      |     | I    |     |       |     | I   |                 |          |
| 15            | Brake line                         |   |    | I    |    | I    |    | I    |     | I    |     |      |     | I    |     |       |     | I   |                 |          |
| 16            | Brake fluid                        |   |    |      |    | R    |    |      | R   |      |     |      |     | R    |     |       |     | R   |                 |          |
| 17            | Disc brake pad and disc            |   |    | I    |    | I    |    | I    |     | I    |     |      |     | I    |     |       |     | I   |                 |          |
| 18            | Brake linings and drums            |   |    | I    |    | I    |    | I    |     | I    |     |      |     | I    |     |       |     | I   |                 |          |
| 19            | Parking brake                      |   |    | I    |    | I    |    | I    |     | I    |     |      |     | I    |     |       |     | I   |                 |          |
| 20            | Suspension                         |   |    | I    |    | I    |    | I    |     | I    |     |      |     | I    |     |       |     | I   |                 |          |
| 21            | Wheel bearing                      |   |    |      |    |      |    |      | (I) |      |     |      |     |      |     |       |     | (I) |                 |          |
| 22            | Axle boots and joints              |   |    | I    |    | I    |    | I    |     | I    |     |      |     | I    |     |       |     | I   |                 |          |
| 23            | Tire rotation                      |   | I  | I    | I  | I    | I  | I    | I   | I    | I   | I    | I   | I    | I   | I     | I   | I   | I               | Note (3) |
| 24            | Steering system (Power steering)   |   |    | I    |    | I    |    | I    |     | I    |     |      |     | I    |     |       |     | I   |                 |          |
| 25            | Air conditioner filter             | Replace every 12 months or 12,000 km (7,500 miles)  |    |      |    |      |    |      |     |      |     |      |     |      |     |       |     |     |                 |          |

Symbol

R: Replace

I: Inspection

(R): Recommended service for maintaining the better vehicle performance

(I): Inspections recommended for vehicle safety

# Schedule

## PERIODIC MAINTENANCE SERVICES

---

### NOTE:

1. This inspection is not necessary to observe exhaust gas regulations or is the responsibility of the manufacturer under the current basic EPA regulations that must be observed by law.
2. Replace the air cleaner element more frequently than the periodic replacement if the vehicle is being used in an excessively dusty environment.
3. Replace the tires if the tread-wear indicator has caused a bar-shaped cut across the tread. The indicator will appear when the remaining amount of tread is less than 1.6 mm (0.063 in).

# Schedule

## PERIODIC MAINTENANCE SERVICES

### 2. FOR CANADA MODEL

#### • Non-turbo model

|            |                                    | Maintenance interval<br>[Number of months or km (miles), whichever occurs first]  |    |    |    |    |    |    |    |    |    |    |    |     |     |     |     |     | Remarks |
|------------|------------------------------------|---|----|----|----|----|----|----|----|----|----|----|----|-----|-----|-----|-----|-----|---------|
| Months     |                                    | 6   | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78  | 84  | 90  | 96  | 102 |         |
| × 1,000 km |                                    | 8   | 16 | 24 | 32 | 40 | 48 | 56 | 64 | 72 | 80 | 88 | 96 | 104 | 112 | 120 | 128 | 136 |         |
|            | × 1,000 miles                      | 5   | 10 | 15 | 20 | 25 | 30 | 35 | 40 | 45 | 50 | 55 | 60 | 65  | 70  | 75  | 80  | 85  |         |
| 1          | Engine oil                         | R   | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R   | R   | R   | R   | R   |         |
| 2          | Engine oil filter                  | R   | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R   | R   | R   | R   | R   |         |
| 3          | Spark plug                         |   |    |    |    |    | R  |    |    |    |    |    | R  |     |     |     |     |     |         |
| 4          | Drive belt(s)                      | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   | I   | I   | I   | I   |         |
| 5          | Emission-related hoses             |   |    |    |    |    |    |    | I  |    |    |    |    |     |     |     |     | I   |         |
| 6          | PCV valve                          |   |    |    |    |    |    |    | I  |    |    |    |    |     |     |     |     | I   |         |
| 7          | Fuel line                          |   |    |    |    |    | I  |    |    |    |    |    | I  |     |     |     |     |     |         |
| 8          | Air cleaner element                |   |    |    | I  |    |    |    | I  |    |    |    | I  |     |     |     |     | I   |         |
| 9          | Cooling system                     |   | I  |    | I  |    | I  |    | I  |    | I  |    | I  |     | I   |     | I   |     |         |
| 10         | Engine coolant                     | Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter |    |    |    |    |    |    |    |    |    |    |    |     |     |     |     |     |         |
| 11         | Clutch system                      |   |    |    |    |    |    |    | I  |    |    |    |    |     |     |     |     | I   |         |
| 12         | Clutch fluid                       | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   | I   | I   | I   | I   |         |
| 13         | Transmission gear oil              | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | R  | I   | I   | I   | I   | I   |         |
| 14         | ATF                                | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | R  | I   | I   | I   | I   | I   |         |
| 15         | Front & rear differential gear oil | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | R  | I   | I   | I   | I   | I   |         |
| 16         | Brake line                         |   |    |    |    |    |    |    | I  |    |    |    |    |     |     |     |     | I   |         |
| 17         | Brake fluid                        | I   | I  | I  | I  | I  | I  | I  | R  | I  | I  | I  | I  | I   | I   | I   | R   | I   |         |
| 18         | Disc brake pad and disc            |   | I  |    | I  |    | I  |    | I  |    | I  |    | I  |     | I   |     | I   |     |         |
| 19         | Brake linings and drums            |   | I  |    | I  |    | I  |    | I  |    | I  |    | I  |     | I   |     | I   |     |         |
| 20         | Parking brake                      |   |    |    |    |    |    |    | I  |    |    |    |    |     |     |     |     | I   |         |
| 21         | Suspension                         | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   | I   | I   | I   | I   |         |
| 22         | Axle boot                          | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   | I   | I   | I   | I   |         |
| 23         | Tires                              | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   | I   | I   | I   | I   |         |
| 24         | Tire rotation                      |   | P  |    | P  |    | P  |    | P  |    | P  |    | P  |     | P   |     | P   |     |         |
| 25         | Steering system (Power steering)   | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   | I   | I   | I   | I   |         |
| 26         | Battery                            |   |    |    |    |    |    |    | I  |    |    |    |    |     |     |     |     | I   |         |
| 27         | SRS airbag                         | Inspect every 10 years  |    |    |    |    |    |    |    |    |    |    |    |     |     |     |     |     |         |
| 28         | Air conditioner filter             |   |    |    | I  |    |    |    | I  |    |    |    |    | I   |     |     |     | I   |         |

Symbol

R: Replace

I: Inspection

P: Perform

NOTE:

1. Test engine coolant for strength (-35°C (-95°F)) and inspect hoses and clamps.

# Schedule

## PERIODIC MAINTENANCE SERVICES

|    |                                     | Maintenance interval<br>[Number of months or km (miles), whichever occurs first]  |     |     |     |     |     |     |          |
|----|-------------------------------------|---|-----|-----|-----|-----|-----|-----|----------|
|    | Months                              | 108   | 114 | 120 | 126 | 132 | 138 | 144 | Remarks  |
|    | × 1,000 km                          | 144   | 152 | 160 | 168 | 176 | 184 | 192 |          |
|    | × 1,000 miles                       | 89  | 94  | 99  | 104 | 109 | 114 | 119 |          |
| 1  | Engine oil                          | R   | R   | R   | R   | R   | R   | R   |          |
| 2  | Engine oil filter                   | R   | R   | R   | R   | R   | R   | R   |          |
| 3  | Spark plug                          | R   |     |     |     |     |     | R   |          |
| 4  | Drive belt(s)                       | I   | I   | I   | I   | I   | I   | I   |          |
| 5  | Emission-related hoses              |   |     |     |     |     |     | I   |          |
| 6  | PCV valve                           |   |     |     |     |     |     | I   |          |
| 7  | Fuel line                           | I   |     |     |     |     |     | I   |          |
| 8  | Air cleaner element                 |   |     | I   |     |     |     | I   |          |
| 9  | Cooling system                      | I   |     | I   |     | I   |     | I   | Note (1) |
| 10 | Engine coolant                      | Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter |     |     |     |     |     |     |          |
| 11 | Clutch system                       |   |     |     |     |     |     | I   |          |
| 12 | Clutch fluid                        | I   | I   | I   | I   | I   | I   | I   |          |
| 13 | Transmission gear oil               | I   | I   | I   | I   | I   | I   | R   |          |
| 14 | ATF                                 | I   | I   | I   | I   | I   | I   | R   |          |
| 15 | Front & rear differential gear oil  | I   | I   | I   | I   | I   | I   | R   |          |
| 16 | Brake line                          |   |     |     |     |     |     | I   |          |
| 17 | Brake fluid                         | I   | I   | I   | I   | I   | I   | R   |          |
| 18 | Disc brake pad and disc             | I   |     | I   |     | I   |     | I   |          |
| 19 | Brake linings and drums             | I   |     | I   |     | I   |     | I   |          |
| 20 | Parking brake                       |   |     |     |     |     |     | I   |          |
| 21 | Suspension                          | I   | I   | I   | I   | I   | I   | I   |          |
| 22 | Axle boot                           | I   | I   | I   | I   | I   | I   | I   |          |
| 23 | Tires                               | I   | I   | I   | I   | I   | I   | I   |          |
| 24 | Tire rotation                       | P   |     | P   |     | P   |     | P   |          |
| 25 | Steering system<br>(Power steering) | I   | I   | I   | I   | I   | I   | I   |          |
| 26 | Battery                             |   |     |     |     |     |     | I   |          |
| 27 | SRS airbag                          | Inspect every 10 years  |     |     |     |     |     |     |          |
| 28 | Air conditioner filter              |   |     | I   |     |     |     | I   |          |

Symbol

R: Replace

I: Inspection

P: Perform

**NOTE:**

1. Test engine coolant for strength (-35°C (-95°F)) and inspect hoses and clamps.

# Schedule

## PERIODIC MAINTENANCE SERVICES

### • Turbo model

|               |                                    | Maintenance interval<br>[Number of months or km (miles), whichever occurs first]  |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     | Remarks |
|---------------|------------------------------------|---|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|-----|---------|
| Months        |                                    | 6   | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 |         |
| × 1,000 km    |                                    | 6   | 12 | 18 | 24 | 30 | 36 | 42 | 48 | 54 | 60 | 66 | 72 | 78 | 84 | 90 | 96 | 102 |         |
| × 1,000 miles |                                    | 4   | 7  | 11 | 15 | 19 | 22 | 26 | 30 | 34 | 37 | 41 | 45 | 48 | 52 | 56 | 60 | 63  |         |
| 1             | Engine oil                         | R   | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R   |         |
| 2             | Engine oil filter                  | R   | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R  | R   |         |
| 3             | Spark plug                         |   |    |    |    |    |    |    |    |    |    |    |    |    |    |    | R  |     |         |
| 4             | Drive belt(s)                      | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   |         |
| 5             | Emission-related hoses             |   |    |    |    |    |    |    |    |    | I  |    |    |    |    |    |    |     |         |
| 6             | PCV valve                          |   |    |    |    |    |    |    |    |    | I  |    |    |    |    |    |    |     |         |
| 7             | Timing belt                        | Replace every 10 years or 168,000 km (104,400 miles)  |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     |         |
| 8             | Fuel line                          |   |    |    |    |    |    |    | I  |    |    |    |    |    |    |    | I  |     |         |
| 9             | Air cleaner element                |   |    |    |    |    |    | I  |    |    |    |    | I  |    |    |    |    |     |         |
| 10            | Cooling system                     |   | I  |    | I  |    | I  |    | I  |    | I  |    | I  |    | I  |    | I  |     |         |
| 11            | Engine coolant                     | Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     |         |
| 12            | ATF                                | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | R  | I   |         |
| 13            | Front & rear differential gear oil | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | R  | I   |         |
| 14            | Brake line                         |   |    |    |    |    |    |    |    |    | I  |    |    |    |    |    |    |     |         |
| 15            | Brake fluid                        | I   | I  | I  | I  | I  | I  | I  | I  | I  | R  | I  | I  | I  | I  | I  | I  | I   |         |
| 16            | Disc brake pad and disc            |   | I  |    | I  |    | I  |    | I  |    | I  |    | I  |    | I  |    | I  |     |         |
| 17            | Brake linings and drums            |   | I  |    | I  |    | I  |    | I  |    | I  |    | I  |    | I  |    | I  |     |         |
| 18            | Parking brake                      |   |    |    |    |    |    |    |    |    | I  |    |    |    |    |    |    |     |         |
| 19            | Suspension                         | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   |         |
| 20            | Axle boot                          | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   |         |
| 21            | Tires                              | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   |         |
| 22            | Tire rotation                      |   | P  |    | P  |    | P  |    | P  |    | P  |    | P  |    | P  |    | P  |     |         |
| 23            | Steering system (Power steering)   | I   | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I  | I   |         |
| 24            | Battery                            |   |    |    |    |    |    |    |    |    | I  |    |    |    |    |    |    |     |         |
| 25            | SRS airbag                         | Inspect every 10 years  |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |     |         |
| 26            | Air conditioner filter             |   |    |    |    |    |    | I  |    |    |    |    |    | I  |    |    |    |     |         |

Symbol

R: Replace

I: Inspection

P: Perform

#### NOTE:

1. Test engine coolant for strength (-35°C (-95°F)) and inspect hoses and clamps.

# Schedule

## PERIODIC MAINTENANCE SERVICES

|            |                                    | Maintenance interval<br>[Number of months or km (miles), whichever occurs first]  |     |     |     |     |     |     |     |     |     |     |     |     |     |     | Remarks  |
|------------|------------------------------------|---|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----------|
| Months     |                                    | 108   | 114 | 120 | 126 | 132 | 138 | 144 | 150 | 156 | 162 | 168 | 174 | 180 | 186 | 192 |          |
| × 1,000 km | × 1,000 miles                      | 108   | 114 | 120 | 126 | 132 | 138 | 144 | 150 | 156 | 162 | 168 | 174 | 180 | 186 | 192 |          |
| 1          | Engine oil                         | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   |          |
| 2          | Engine oil filter                  | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   | R   |          |
| 3          | Spark plug                         |   |     |     |     |     |     |     |     |     |     |     |     |     |     | R   |          |
| 4          | Drive belt(s)                      | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   |          |
| 5          | Emission-related hoses             |   |     | I   |     |     |     |     |     |     |     |     |     | I   |     |     |          |
| 6          | PCV valve                          |   |     | I   |     |     |     |     |     |     |     |     |     | I   |     |     |          |
| 7          | Timing belt                        | Replace every 10 years or 168,000 km (104,400 miles)  |     |     |     |     |     |     |     |     |     |     |     |     |     |     |          |
| 8          | Fuel line                          |   |     |     |     |     |     | I   |     |     |     |     |     |     |     | I   |          |
| 9          | Air cleaner element                | I   |     |     |     |     |     | I   |     |     |     |     |     | I   |     |     |          |
| 10         | Cooling system                     | Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter |     |     |     |     |     |     |     |     |     |     |     |     |     |     |          |
| 11         | Engine coolant                     | I   |     | I   |     | I   |     | I   |     | I   |     | I   |     | I   |     | I   | Note (1) |
| 12         | ATF                                | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | R   |          |
| 13         | Front & rear differential gear oil | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | R   |          |
| 14         | Brake line                         |   |     | I   |     |     |     |     |     |     |     |     |     | I   |     |     |          |
| 15         | Brake fluid                        | I   | I   | R   | I   | I   | I   | I   | I   | I   | I   | I   | I   | R   | I   | I   |          |
| 16         | Disc brake pad and disc            | I   |     | I   |     | I   |     | I   |     | I   |     | I   |     | I   |     | I   |          |
| 17         | Brake linings and drums            | I   |     | I   |     | I   |     | I   |     | I   |     | I   |     | I   |     | I   |          |
| 18         | Parking brake                      |   |     | I   |     |     |     |     |     |     |     |     |     | I   |     |     |          |
| 19         | Suspension                         | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   |          |
| 20         | Axle boot                          | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   |          |
| 21         | Tires                              | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   |          |
| 22         | Tire rotation                      | P   |     | P   |     | P   |     | P   |     | P   |     | P   |     | P   |     | P   |          |
| 23         | Steering system (Power steering)   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   | I   |          |
| 24         | Battery                            |   |     | I   |     |     |     |     |     |     |     |     |     | I   |     |     |          |
| 25         | SRS airbag                         | Inspect every 10 years  |     |     |     |     |     |     |     |     |     |     |     |     |     |     |          |
| 26         | Air conditioner filter             | I   |     |     |     |     |     | I   |     |     |     |     |     | I   |     |     |          |

Symbol

R: Replace

I: Inspection

P: Perform

**NOTE:**

1. Test engine coolant for strength (-35°C (-95°F)) and inspect hoses and clamps.

# Schedule

## PERIODIC MAINTENANCE SERVICES

### B: PERIODIC REPLACEMENT PARTS

| Item                               | Maintenance interval | Repeat short distance driving | Repeat driving on bumpy muddy road | Driving in extremely cold weather | Area where salt or other corrosive substance used, or coastal area | High humidity or mountain area | Repeat towing trailer |
|------------------------------------|----------------------|-------------------------------|------------------------------------|-----------------------------------|--|--------------------------------|-----------------------|
| Engine oil                         | Every 3.75 months    | R                             |                                    | R                                 |  |                                | R                     |
|                                    | 6,000 km             |                               |                                    |                                   |  |                                |                       |
|                                    | 3,750 miles          |                               |                                    |                                   |  |                                |                       |
| Engine oil filter                  | Every 3.75 months    | R                             |                                    | R                                 |  |                                | R                     |
|                                    | 6,000 km             |                               |                                    |                                   |  |                                |                       |
|                                    | 3,750 miles          |                               |                                    |                                   |  |                                |                       |
| Fuel filter                        | Every 15 months      |                               |                                    |                                   | I  |                                |                       |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Fuel line                          | Every 15 months      |                               |                                    |                                   | I  |                                |                       |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Transmission gear oil              | Every 15 months      |                               |                                    |                                   |  |                                | R                     |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| ATF                                | Every 15 months      |                               |                                    |                                   |  |                                | R                     |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Front & rear differential gear oil | Every 15 months      |                               |                                    |                                   |  |                                | R                     |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Brake line                         | Every 15 months      | I                             | I                                  |                                   | I  |                                | I                     |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Brake fluid                        | Every 15 months      |                               |                                    |                                   |  | R                              |                       |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Disc brake pad and disc            | Every 15 months      | I                             | I                                  |                                   | I  |                                | I                     |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Brake linings and drums            | Every 15 months      | I                             | I                                  |                                   | I  |                                | I                     |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Parking brake                      | Every 15 months      | I                             | I                                  |                                   | I  |                                | I                     |
|                                    | Every 24,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 15,000 miles   |                               |                                    |                                   |  |                                |                       |
| Suspension                         | Every 7.5 months     |                               | I                                  | I                                 | I  |                                | I                     |
|                                    | Every 12,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 7,500 miles    |                               |                                    |                                   |  |                                |                       |
| Axle boots and joints              | Every 7.5 months     | I                             | I                                  | I                                 | I  |                                | I                     |
|                                    | Every 12,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 7,500 miles    |                               |                                    |                                   |  |                                |                       |
| Steering system (Power steering)   | Every 7.5 months     | I                             | I                                  | I                                 | I  |                                | I                     |
|                                    | Every 12,000 km      |                               |                                    |                                   |  |                                |                       |
|                                    | Every 7,500 miles    |                               |                                    |                                   |  |                                |                       |